



## Fresh Air Outlet Fragrance Machine

# Installation and User Manual

Please read this manual carefully before installing or using this product.

Product appearance is subject to the actual product.



Note: Display and functions may vary by model configuration and connected control devices.

|                                               |   |
|-----------------------------------------------|---|
| I. Product Introduction.....                  | 1 |
| 1.1 Product Introduction.....                 | 1 |
| 1.2 Precautions.....                          | 1 |
| II. Basic Product Information.....            | 2 |
| 2.1 Product Dimensions.....                   | 2 |
| 2.2 Basic Parameters.....                     | 2 |
| III. Product Connection and Installation..... | 3 |
| 3.1 Interface Wiring Definition.....          | 3 |
| 3.2 Installation Requirements.....            | 3 |
| 3.3 Installation.....                         | 4 |
| IV. Certificate and Warranty.....             | 6 |
| 4.1 Certificate.....                          | 6 |
| 4.2 Warranty Terms.....                       | 7 |
| 4.3 Warranty Record.....                      | 8 |

## I. Product Introduction

### 1.1 Product Introduction

In daily home living, are you often troubled by stale indoor odors? Even when the fresh air system is on, lingering smells can remain, while traditional air fresheners may be ineffective.

Now, this fresh air outlet fragrance machine is designed for fresh air systems. It breaks the limits of indoor scent and lets every stream of fresh air carry natural fragrance, creating a warm home atmosphere.

1. Three fan speeds adapt to whole-home spaces.
2. Replaceable fragrance design unlocks diverse home atmospheres.
3. Detailed design: safe, convenient, and home-friendly.



**Note:** 1. Display and functions may vary by model configuration and connected control devices.


2. Motor rotation noise during power-on/off is normal.

### 1.2 Precautions

- Do not continue rotating the air outlet after it reaches the limit position; this may damage the thread.
- All wiring must comply with national, regional, and local regulations. Do not exceed the control panel current capacity.
- Make sure power is disconnected before electrical wiring. Connecting components while powered may cause electric shock, injury, or death.
- Do not power on the system before all wiring has been checked. Short circuits or incorrect wiring may permanently damage the device.

## II. Basic Product Information

### 2.1 Product Dimensions

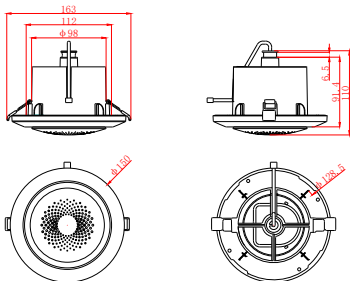


### 2.2 Basic Parameters

| Description   | Parameter            |
|---------------|----------------------|
| Product Size  | Dia. 150 x 110 mm    |
| Power Supply  | 12V-24V input        |
| Power         | DC12V-24V, $\leq 3W$ |
| Communication | RS-485               |
| Net Weight    | 300 g                |

### III. Product Connection and Installation

#### 3.1 Interface Wiring Definition

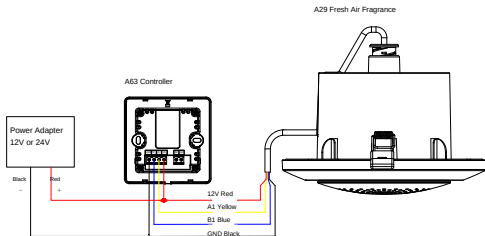

#### 3.2 Installation Requirements

- This product must be installed by qualified personnel. Improper installation may damage the device.
- Check that the input voltage and power meet the operating requirements.




**Warning: Electric Shock Hazard**


Disconnect power before installation, service, or removal.

### III. Product Connection and Installation


#### 3.3.1 Installation - Fragrance Cartridge

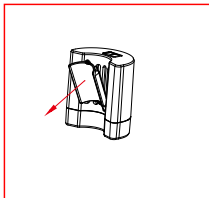


1. Remove the cartridge and peel off the silicone seal.

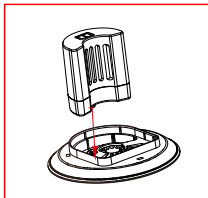

2. Align the raised part with the cover buckle, then press the cartridge into the cover.

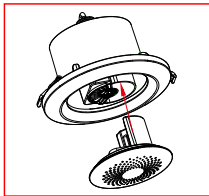


3. Insert the fragrance cartridge cover into the body groove; magnets on both ends attach.

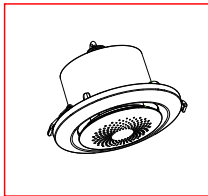


4. Cartridge assembly complete.

### III. Product Connection and Installation


#### 3.3.2 Installation - Air Outlet Adjustment

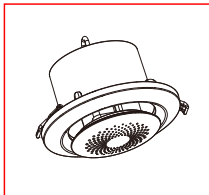


1. Turn counterclockwise to open the air outlet. Remove the decorative cover first if needed.

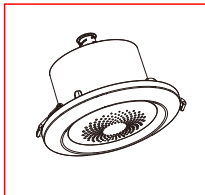

2. Turn clockwise to close the air outlet. Remove the decorative cover first if needed.

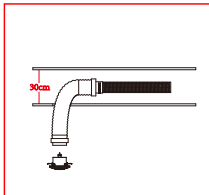

3. Open a 130 mm fresh-air hole, pull out the duct (DN75-100), and insert the unit.

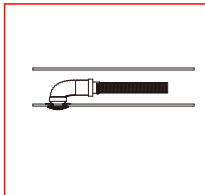

4. Embed the fragrance machine in the ceiling.

## 4.1 Certificate

|                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                        |       |     |           |       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|-----|-----------|-------|
| <br><br><br><br><br><br><br><br><br><br>Manufacturer: XIAMEN MAXMAC AIR TECHNOLOGY CO.,LTD<br><br>Address: No. 1050-1, Buzang Middle Rd., Xiamen | <br><br><br><br><br><br><br><br><br><br><div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: fit-content;"><p>Product Certificate</p><p>CERTIFICATE OF QUALITY</p><table style="width: 100%;"><tr><td style="width: 60%;">Model</td><td>001</td></tr><tr><td>Inspector</td><td>_____</td></tr></table></div> | Model | 001 | Inspector | _____ |
| Model                                                                                                                                                                                                                             | 001                                                                                                                                                                                                                                                                                                                                                                                                                    |       |     |           |       |
| Inspector                                                                                                                                                                                                                         | _____                                                                                                                                                                                                                                                                                                                                                                                                                  |       |     |           |       |

### 4.2 Warranty Terms

1. The company provides a one-year warranty for this product. If special warranty requirements apply, the sales contract shall prevail. Warranty service is valid only in mainland China.
2. During the warranty period, material fees may be charged for damage caused by the user.
3. After the warranty period expires, service will continue to be provided. Service and material fees will be charged according to the latest published standards.
4. The following are not covered by the warranty:
  - (1) Filter materials, glass, seals, decorative housings, exterior coatings, etc.;
  - (2) Damage caused by force majeure such as fire, flood, lightning, or earthquake;
  - (3) Damage caused by improper transport, installation, use, or storage;
  - (4) Unauthorized disassembly, modification, or repair by a non-authorized service provider;
  - (5) The device number on the warranty card does not match the product sent for repair, or has been altered;
  - (6) The warranty card and invoice cannot be provided.
6. The warranty period starts from the invoice date for this product.
7. Warranty and service are handled by the product dealer.
8. Please keep the warranty card and invoice properly and present them for warranty registration.

## IV. Certificate and Warranty

Warranty Record (User Copy)

|                   |  |
|-------------------|--|
| Product Name      |  |
| Model             |  |
| Purchase Date     |  |
| User Name         |  |
| Phone             |  |
| Address           |  |
| Repair Date       |  |
| Fault Description |  |
| Service Result    |  |

Warranty Record (Dealer Copy)

|                   |  |
|-------------------|--|
| Product Name      |  |
| Model             |  |
| Purchase Date     |  |
| User Name         |  |
| Phone             |  |
| Address           |  |
| Repair Date       |  |
| Fault Description |  |
| Service Result    |  |

Customer: \_\_\_\_\_

Phone: \_\_\_\_\_

Address: \_\_\_\_\_

Dealer: \_\_\_\_\_

Phone: \_\_\_\_\_

Address: \_\_\_\_\_



Manufacturer: XIAMEN MAXMAC AIR TECHNOLOGY CO.,LTD

Address: No. 1658-1, Butang Middle Road, Tongxiang High-Tech City, Xiamen